



Pin 1 = Enable (low = enabled), Pin 3, Direction, Pin 5 Step, Pin 7 Motor driver interface (common), Pin 8 = SYNC (selectable direction). All axes pins are interface common.

|  |                  |        |
|--|------------------|--------|
| <b>Basess Motor</b>                                |                  |        |
| File: Stepper1.sch                                 |                  |        |
| Sheet: /   |                  |        |
| <b>Title: 20A Unipolar stepper driver</b>          |                  |        |
| Size: A3   | Date: 7 sep 2009 | Rev: b |
| Kicad E.D.A. eeschema (2010-05-05 B2R 2356)-stable |                  | 1/1    |